Calibration of a Zoom Encoder

It is necessary to calibrate a zoom encoder DALS systems only first time. Then the DALS software and its updates will use the config file with saved calibration (%PROGRAMDATA%\OctoNus Software\Digital Microscope\zoom_encoder_calibration.xml).

Start the DALS program and connect to the microscope.
 Select the "Tools" tab. Find the "Zoom encoder calibration" panel".

✦ Hardware ੀ	View Tools								
Crash dump server									
Zoom encoder calibration									
Zoom	Angle	Zoom: 6,0 ‡ Angle: 349.453							
		Clear all							

- 3. Do next steps for all ticks on the zoom wheel:
 - a. Manually change zoom wheel to next tick (for example 6.0). You can see that the 'angle' label is changed.
 b. Change zoom value editbox to the correspondent zoom (for example, 6.0 again).
 - c. Click at the button. You should see that a zoom-angle pair is added to the table:

H	- Hardware	60 /	/iew	••••	Tools					
C	Crash dump server									
Zoom encoder calibration										
	Zoom		Angle			Zoom: 6,0 🛟	+			
	6		349,453				Angle: 349.453			
							Clear all			

4. After you add pairs for all your zoom ticks you'll see the zoom-angle table like this:

Э	- Hardware	ජ ව Viev	v 🎫	Tools							
C	Crash dump s	erver									
Z	oom encode	r calibrat	tion								
	Zoom 40 50 55	200 247 278 29	Ang 5,309 7,852 3,438 1,006	le	Zoom: Angle:	55,0 291.006	•	+			
5. Go	to the 'Hardware' tab	and check zoo	om calibratio	on by whee	eling the zoom v	heel manually	and co	mpare tick	s with zoor	n value in the	DALS GUI:
H	- Hardware	ජ ව Viev	N	Tools							
2	oom and foc	us									
	Q 17.3	×			Z -7	.740n	nm	ו 			