

Keyboard (shortcuts)

View control	
Shortcut	Function
Zoom	Ctrl + Mouse Wheel
	Right Mouse Button + Mouse Wheel
Zoom In	Ctrl + "+", "="
Zoom Out	Ctrl + "-"
1:1	Ctrl + "0"
Fit	
Fill	
Pan	Middle Mouse Button + Drag,
	Shift + Right Mouse Button + Drag
	Shift + Arrow Keys (not implemented yet)
Reset pan	Ctrl + Shift + "0"

Application Main Menu	
Data load/save	
Shortcut	Function
Ctrl + O	Load data
Ctrl + S	Save data
View	
Shortcut	Function
Alt + Enter / F11	Toggle On / Off Fullscreen
Escape	Leave Fulscreen Mode
Shift + F1	Show Only Main View
Shift + F2	Show Two Views
Shift + F3	Show Three Views
Shift + F4	Show Four Views
Shift + F5	Show / Hide Left Panel
Shift + F6	Show / Hide Right Panel
Ctrl + G	Show Grid
Ctrl + Shift + G	Toggle Next Grid Info
Alt + S	Stereo On / Off
Alt + L	Only Left Camera
Alt + R	Only Right Camera
Alt + I	Invert Cameras
Alt + T	Image Fit Mode On / Off
P	Play / Pause
Shift + Tab	Toggle Display Panels
Ctrl + Alt + C	Color Mode (only for color cameras)
Ctrl + Alt + M	Mix Grayscale Mode (only for color cameras)
Ctrl + Alt + R	Red Channel Grayscale Mode (only for color cameras)

Ctrl + Alt + G	Green Channel Grayscale Mode (only for color cameras)
Ctrl + Alt + B	Blue Channel Grayscale Mode (only for color cameras)
DM	
Shortcut	Function
C	Connect to the Hardware
H	Toggle On / Off Enhancing
Controllers	
Shortcut	Function
Q / A	Aperture Increase / Decrease
W / S	Exposure Increase / Decrease
E / D	Gain Increase / Decrease
+ / -	Zoom In / Out
Alt + + / Alt + -	Zoom In / Out Predefined
Alt + 0	Auto Zoom Step
Alt + 1	Zoom 1x Step
Alt + 2	Zoom 2x Step
Alt + 3	Zoom 5x Step
Alt + 4	Zoom 7x Step
Alt + 5	Zoom 10x Step
F	Next Predefined Focus Step
Ctrl + 0	Auto Focus Step
Ctrl + 1	Focus Step 5 µm
Ctrl + 2	Focus Step 10 µm
Ctrl + 3	Focus Step 50 µm
Ctrl + 4	Focus Step 100 µm
Ctrl + 5	Focus Step 500 µm
Ctrl + J	Toggle On / Off Joystick
Ctrl + Alt + 0	Set Default Joystick Navigation Settings
Ctrl + Alt + 1	Lock/Unlock Dominant Joystick Axis
Ctrl + Alt + 2	Lock/Unlock Offset Joystick Axes
Ctrl + Alt + 3	Lock/Unlock Rotate Joystick Axes
Ctrl + Alt + 4	Lock/Unlock Rotation Center
Recording Data	
Shortcut	Function
R	Start / Stop Movie Recording
Ctrl + P	Take Photo
Ctrl + Shift + P	Show Take Photo Dialog
HDR / Tonemapping	
Shortcut	Function
Space	Toggle Fast / Slow Tonemapping
Ctrl + F1	Set 8-bit Tonemapping Mode

Ctrl + F2	Set 16-bit Tonemapping Mode
Calibration	
Shortcut	Function
F5	Toggle Left Camera Horizontal Flip
Ctrl + F5	Toggle Left Camera Vertical Flip
F6	Toggle Right Camera Horizontal Flip
Ctrl + F6	Toggle Right Camera Vertical Flip
Shift + Left / Shift + Right	Horizontal Shift Increase / Decrease
Shift + Up / Shift + Down	Vertical Shift Increase / Decrease
Ctrl + Left / Ctrl + Right	Angle Z Increase / Decrease

3D-Ruler Tool	
Shortcut	Function
Ctrl + N	Take New Snapshot for Marking Points
Delete	Clear Ruler
F4	Toggle Sync Moving of Pivots
Ctrl	Hide Ruler
Shift	Hide Pivot Squares

Whitebalance Panel	
Shortcut	Function
F2	Rename Selected Whitebalance Preset
Delete	Delete Selected Whitebalance Preset

Video Emulator	
Shortcut	Function
Right	Next Movie Frame
Left	Previous Movie Frame
Home	Go To Begin Movie
End	Go To End Movie