

# DOP Leveling

In Galahad Compass, you can perform a DOP leveling which is a DOP rotation axis alignment on DOP zero level. The DOP Leveling button is presented on the right panel of Galahad Compass which enables the DOP leveling mode. As soon as leveling is finished, you need to re-calibrate the DOP.

Your browser does not support the HTML5 video element