


Autoexposure

Auto exposure tool automatically adjusts the camera exposure according to ambient lighting.

Locates on the right panel in the Hardware plugins tab:

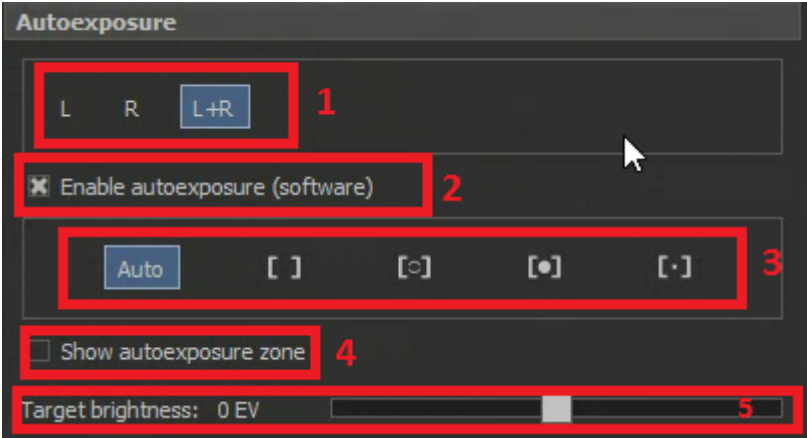

- 1. Cameras selection for auto exposure calculation (only for one camera or on both cameras).
- 2. Enable / disable software auto exposure calculation algorithm
- 3. Region of interest on image for auto exposure algorithm (using only this region AE algorithm adjusts exposure)
- 4. Show / hide AE region of interest
- 5. Target brightness shift (in exposure values). If you want to make image darker, move the slider to the left, brighter - to the right.