2018.11.23 - Galahad Compass 4.8.14


Here you can find information about what is new in Galahad Compass version 4.8.14.

On this page:

- 1 Compass Mode New Look 2 Additional Information in Scene 3 DOP Leveling 4 Switching Between Reflections 5 DOP Click Correction


Compass Mode New Look



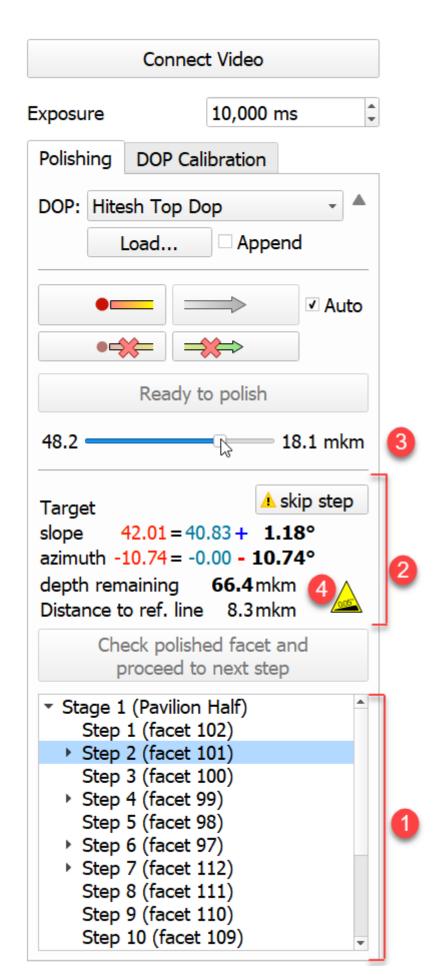

The following changes have been implemented on the **Polishing** tab:


- 1. Tree of stages and steps is displayed.
- 2. For the currently selected step, the full information is displayed.
- 3. For the currently selected step, the progress slider is displayed.



Additional Information in Scene

In Galahad Compass, now the following information is presented in the Scene:

- 1. The model thumbnail visualization.
- 2. Text messages and warnings.
- 3. The current facet with the depth indicator (you can also switch to the mode representing the current facet larger in the middle of the Scene).

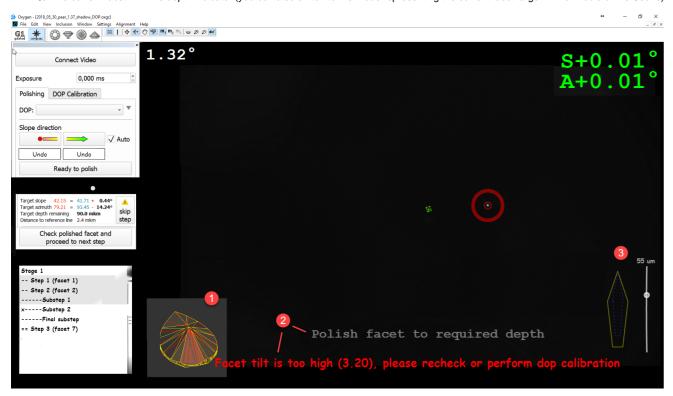

DOP Leveling


In Galahad Compass, now you can perform a DOP leveling which is a DOP rotation axis alignment on DOP zero level. The DOP Leveling button is added to the right panel of Galahad Compass which enables the DOP leveling mode. As soon as leveling is finished, you need to re-calibrate the DOP.

Your browser does not support the HTML5 video element


Switching Between Reflections

In Galahad Compass scene, there can be several reflections. This can happen when the stone is positioned in the DOP so that the several facets produce reflections. To do so, click the Scene, then press the TAB key.

The selected reflection stays selected when it moves.

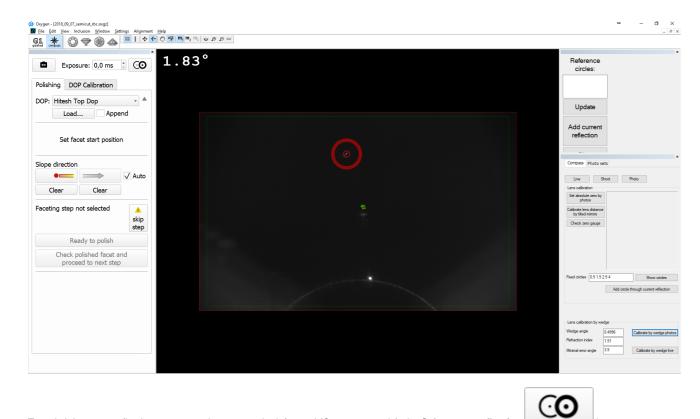

To switch between reflections, you can also use, on the left panel (Compass mode), the Select next reflection

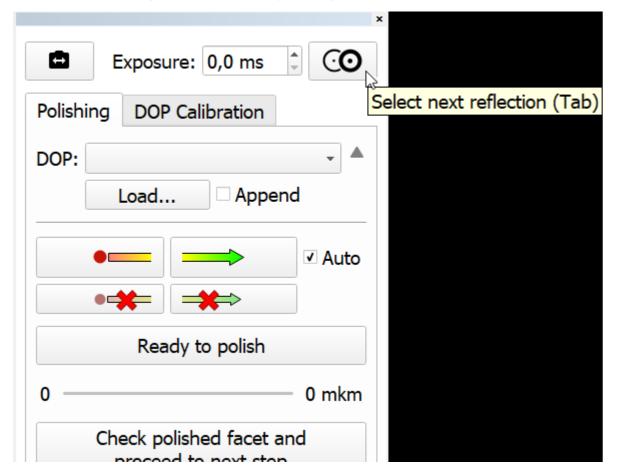

DOP Click Correction

The new DOP Click Correction mode is implemented for the cases when azimuth angle change to start polishing is too big to reach it within one step. After reaching the target position and before polishing, a DOP should be adjusted on + or -X click steps. To use the feature you should, in the Compass mode, on the Polishing tab, select Use Clicks option for your DOP. The system will recalculate target position azimuth considering that you will need to adjust DOP azimuth for the required number of clicks before polishing. In the Scene, the corresponding reminder will be shown as soon as you click Ready to Polish.

Your browser does not support the HTML5 video element

Configuration



You can configure settings below only if specific conditions are met.

To configure what number of DOP clicks should be available for selecting by users, under Internal Configuration, set your value for Compass > Possible dop click count. The default value is "8,16,24,32,48,96".