


Automatic Actions

This group of settings is related to the automatic actions that may or may not be performed after scanning (see [Scanning](#)).

Settings are available on Settings > General Settings > Automatic Actions section. Settings ar split into two tabs:


On this page:	
1	Post-scan Actions
2	Post-scan Export

Post-scan Actions

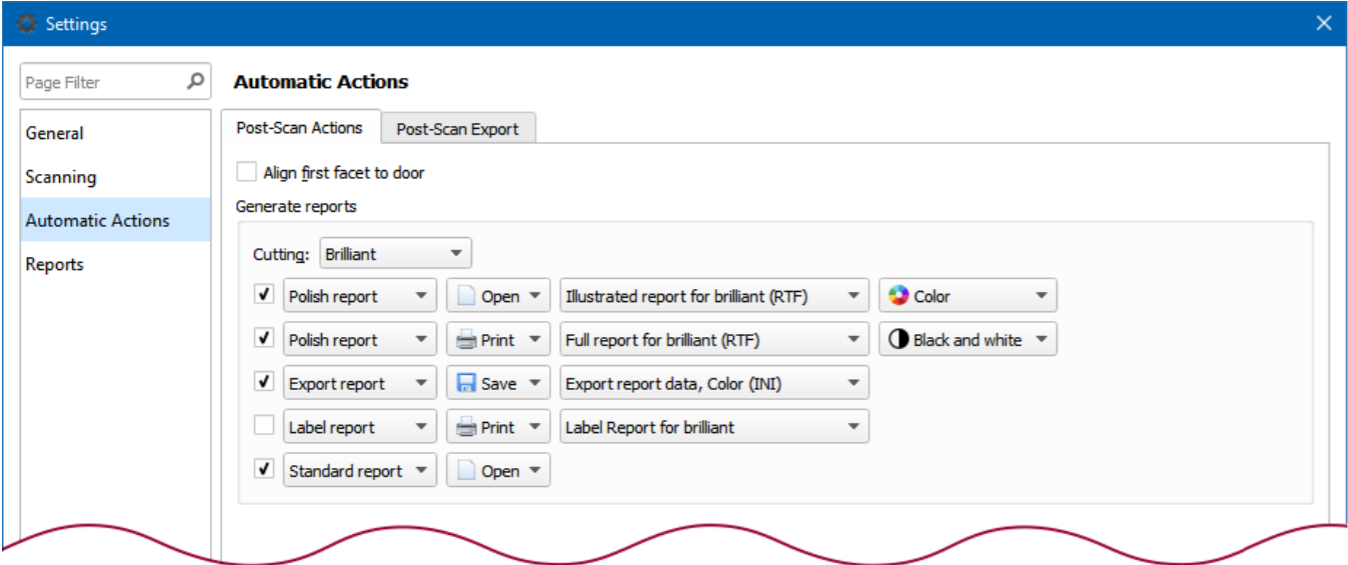

Option	Meaning	Default state
Align first facet to door	Aligns the real stone so that the model's first facet is turned to the door, in order to facilitate marking.	Off
Generate reports	<p>Generates the selected reports. Note that this setting is made for each cutting type separately. For each selected report, select the template, color, and action (wherever applicable).</p> <p>The choice of possible actions depends on the report type:</p> <ul style="list-style-type: none">Polish reports can be either printed or opened in MS Word.Export report can only be saved.Label report can only be printed.Standard report can only be viewed in its panel (see Standard report).	Off

Post-scan Export

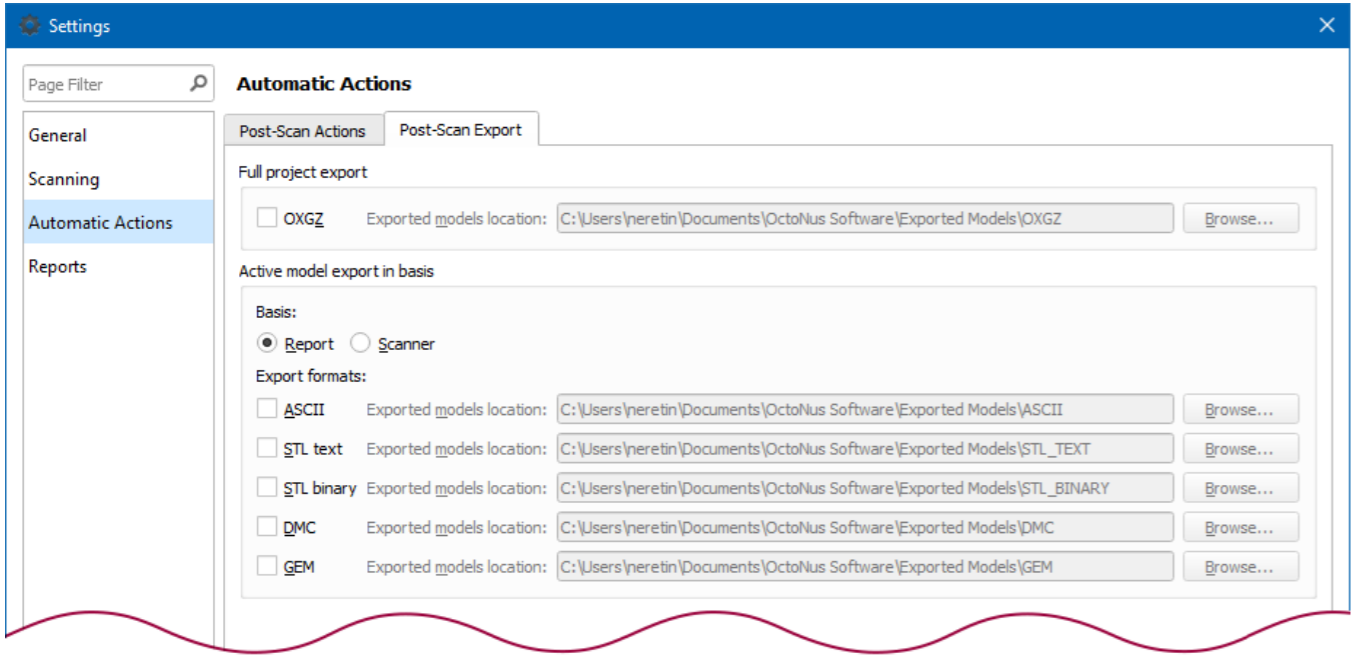

Option	Meaning	Default state
Full project export	Exports the whole project (including the scanned model and contours) in an *.oxgz format (HPOxygen's native format). The user is prompted to choose the location for the exported file.	Off
Export	<p>Exports the scanned model in a variety of formats (see Export model). The user is prompted to choose the basis (Report or Scanner) and the location for the exported file.</p> <p>The available formats are:</p> <ul style="list-style-type: none">• ASCII• STL (text)• STL (binary)• DMC• GEM	Off