
## 2014.06.06 - Helium Polish version 5.6.44.1/report.dll version 2.4.19.1

## Release contains:

File	Version
HeliimPolish.exe	5.6.44.1
report.dll	2.4.19.1

## In this version we have fixed following bugs:


1. Intentional choice of Cushion report in filed Report. Early "cushion" type of report was absent.

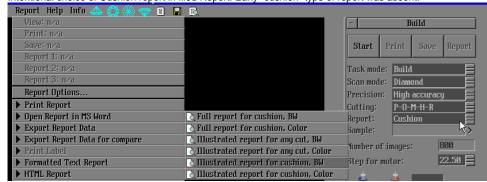

- 2. Some stability fixes for algorithm of holder plane checking.
  - a. button Start will not be blocked if operator close panel by left upper cross. There is no need to restart program.
  - b. if operator doesn't remove stone when program asks to do it then program will block scanning. When operator removes stone programs unblock scanning with next checking.
  - c. during "computer power safe" mode checking of holder will not run.
  - d. program shows corresponding message box if file HolderContours.mmd is absent or contains not correct contours.

## This version has following new feature:

1. Measurements of facet junctions for RBC and for rounded fancies. New bookmarks are in Full reports. Templates of reports are attached.

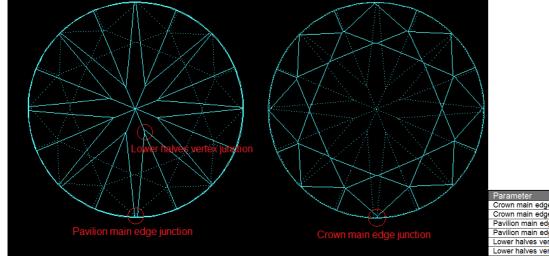

2. Bookmarks:
PAV\_MAIN\_EDGE\_JUNCTION\_...

CRN\_MAIN\_EDGE\_JUNCTION\_...
LOWER\_HALVES\_VERTEX\_JUNCTION\_...

Please find set of templates where Full\_report\_for\_brilliant.rtf and Full\_report\_for\_rounded\_fancies.rtf are changed – new parameters are added.