

2016.12.09 - Oxygen Server Microscope 3.21.2.2423

- [3D TV option](#)
- [Tone Mapping and Autocontrast option](#)
- [Focus depth control](#)
- [Interface](#)
- [Miscellaneous](#)
- [Bugfixes](#)

3D TV option

The 3D TV feature displays the camera image and model (together with the inclusions, if any) for stereo viewing. To use the feature, a display with 3D capability must be attached to the computer as second monitor.



i The TV set must have native resolution of 3840x2160 px or higher. Check the manual of your TV to find out which stereo mode it uses, and set up Oxygen Server accordingly by starting it with the corresponding command line key, see [Command Line Switches](#).


The preferred TV models are:


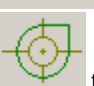
- LG 55UB950V
- LG 49UB850V
- LG 49UH850V
- LG 49UF8537
- LG 49UF8507


Oxygen Server window contains a new panel with the following functionality:

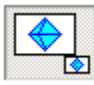


1.  opens a new window on second monitor, always maximized, containing the camera view with overlaid model.
2.  toggles 3D view on the second monitor (see below).

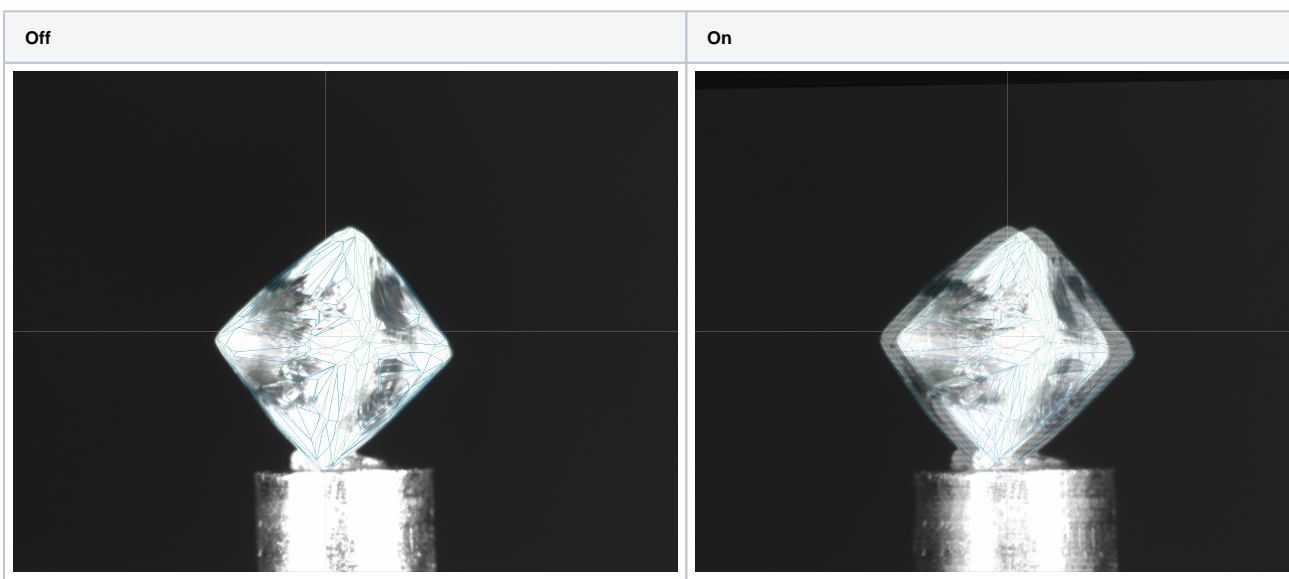

3.  changes the scale of the image on the second monitor.
4.  toggles the display of crosshair and pear pointer on the second monitor.

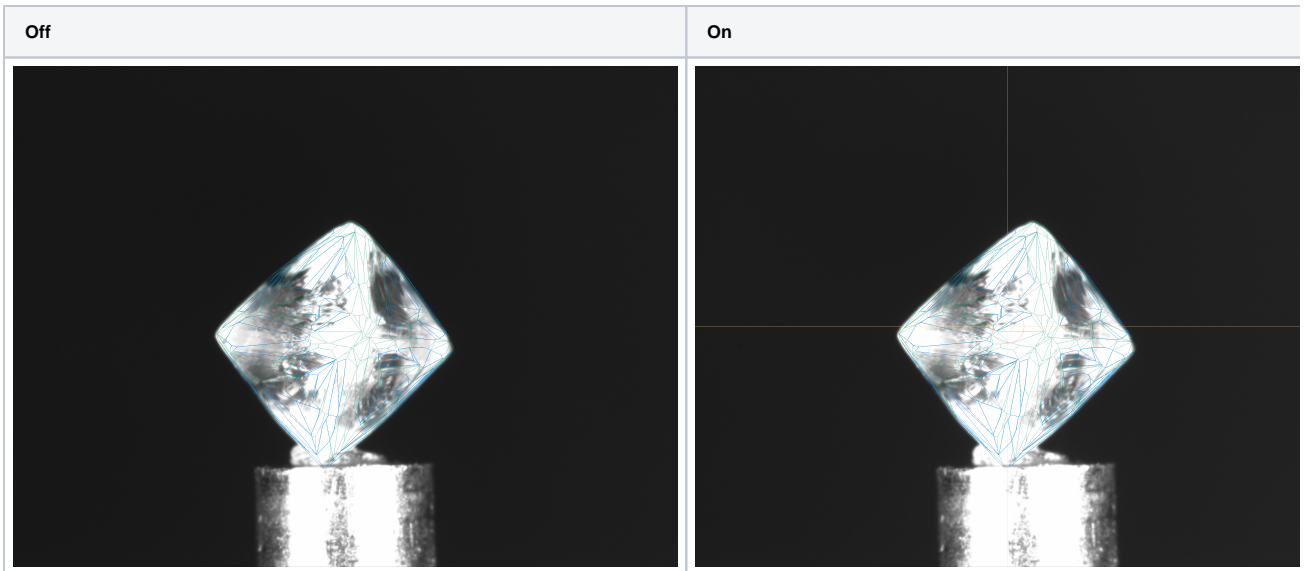


Note that the photosets are saved as stereo (*.jps, *.pns) by default, unless forced to be mono. This ensures that they can later be viewed as 3D TV too.

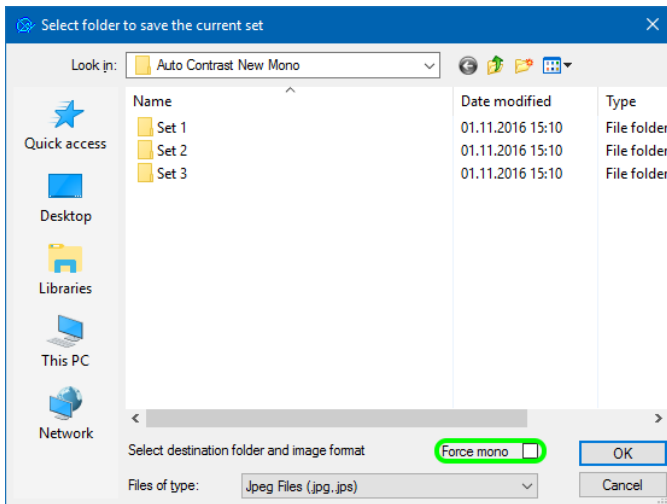

Tone Mapping and Autocontrast option

Tone mapping is a method to convert data with greater color depth (12 or 16 bit) to 8 bit. The method is applied only if the camera is working in Mono16 or RGB16 mode.

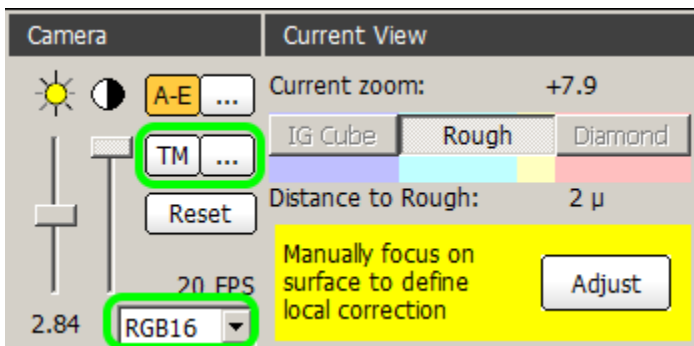


The method offers a variety of options which may be tuned for the best visibility of inclusions. See [Tone mapping](#) for more details.



Note that the tone mapping is applied only to the screen representation. Automatic functions of the program rely on the raw data with their lowest significant bits discarded.

Autocontrast is one of the Tone Mapping options. When switched on, it automatically adjusts contrast of the image.

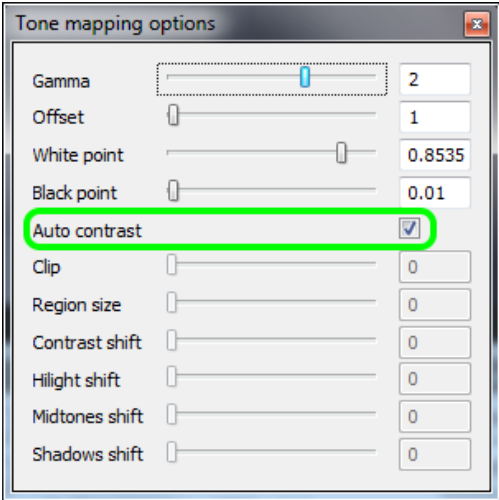


Below is the series of similar photos taken with and without Autocontrast.

	Method: Gamma AutoContrast off	Method: Gamma AutoContrast on
50x - feather	blocked URL	blocked URL
50x - cloud - 1st direction	blocked URL	blocked URL
80x - cloud - 1st direction	blocked URL	blocked URL
160x - cloud - 1st direction	blocked URL	blocked URL
50x - cloud - 2nd direction	blocked URL	blocked URL
80x - cloud - 2nd direction	blocked URL	blocked URL
160x - cloud - 2nd direction	blocked URL	blocked URL
50x - cloud - 3rd direction	blocked URL	blocked URL
80x - cloud - 3rd direction	blocked URL	blocked URL
160x - cloud - 3rd direction	blocked URL	blocked URL

Focus depth control

New interface for measuring and setting the focus depth is introduced.

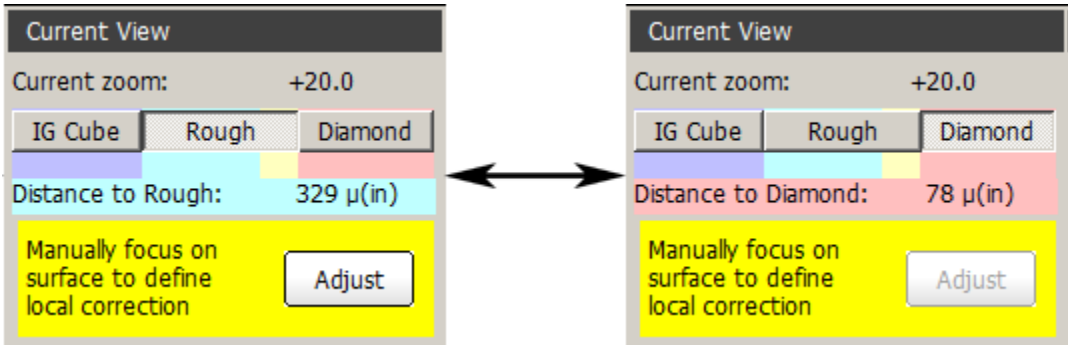


Buttons determine which object is used to measure the distance to:

Button	Object
IG cube	Not available in Oxygen Server
Rough	Surface of the rough diamond

Diamond	Surface of the active (selected) polished diamond.
----------------	--

Surface button sets the focus to the surface of the object (rough diamond or polished diamond, depending on the selection).

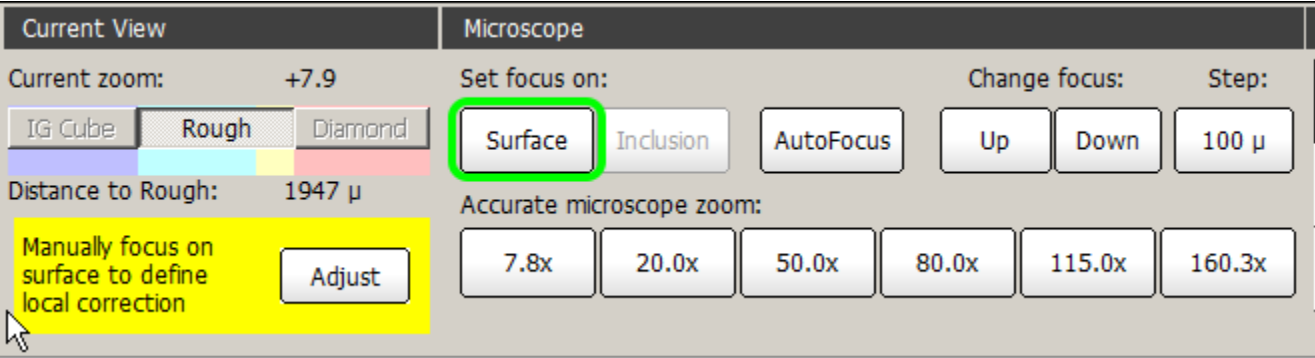

If the model contains no allocated polished diamonds or none of them is selected, the **Diamond** button is disabled. Note also that the diamond itself is not shown in this mode.

i To select a diamond, switch to **Allocate** mode, click at one of the solutions on the **Solutions** panel, and then click one of the diamonds on the **Diamonds** panel.

The purpose of measuring the distance to diamond is mostly a quick check for a certain inclusion in photo view, without having to build it. By focusing on the diamond in the direction of the inclusion, you may clearly see whether or not the inclusion is inside the diamond.


The measured distance in micrometers is displayed in the caption below. Note the "(in)" postfix indicating that the focus is inside the object.

Color background behind the caption indicates the location of the focus:


Color	Meaning
No color	Outside the immersion cube
Cyan	Inside the rough stone, but more than 30 μm from the polished diamond
Yellow	Within 30 μm outside the polished diamond
Red	Inside the polished diamond

Interface

- Camera mode can now be selected from within the program, rather than set in the *.ini file.

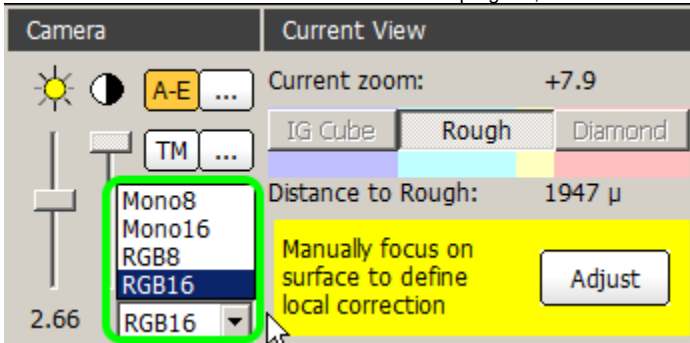

- Exposition length is now displayed beneath the slider.

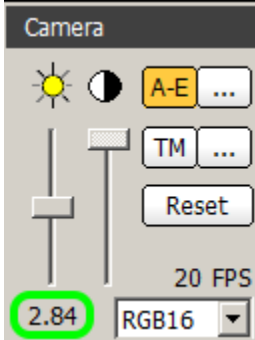


- Rear lighting LEDs are now controlled separately.

[blocked URL](#)

Miscellaneous

- An option of saving photosets in PNG format is introduced.

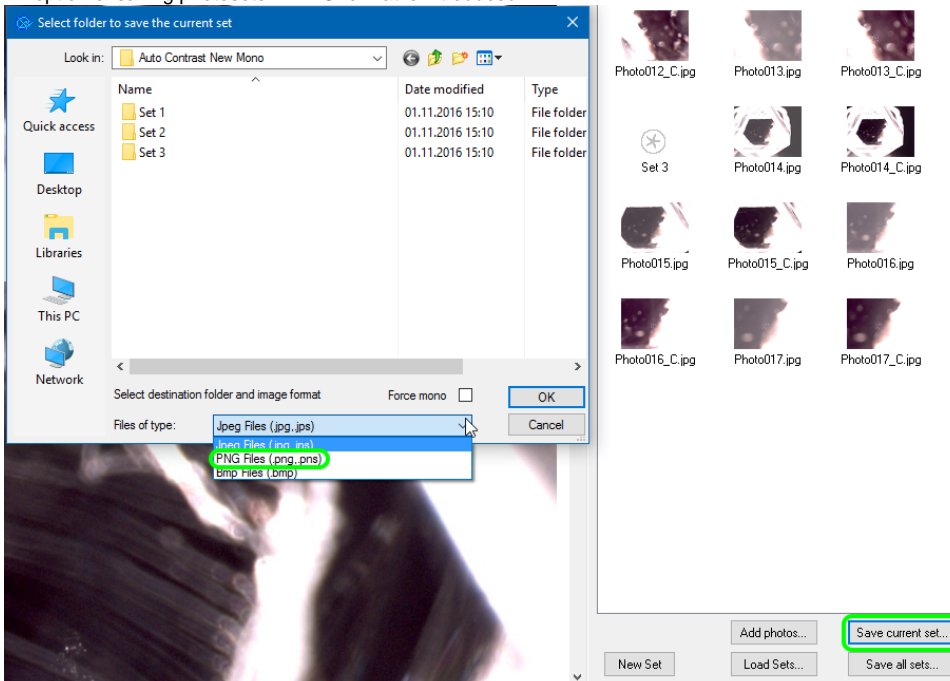

- Images can now be saved with 16 bits per channel.
Note that IG scanning must be done with 8-bit depth.

Bugfixes

- Occasional crashing upon selecting inclusions with BBox.

- Loading of color photos of enhanced bit depth is fixed.
- Occasional crashing of the program upon autosave when working with models having excessively numerous inclusions is fixed.
- Live video feed failing to work in Cavities mode is fixed.
- Misplacing inclusions when saving model to *.dmc is fixed.
- Occasional instability of linear displacements is fixed.
- Incorrect zoom order change when pressing Ctrl + E in live mode for stereo microscope Leica M205A is fixed.
- Error message appearing while building AutoCavity is fixed.

Surface button sets the focus to the surface of the object (IG cube, rough diamond, or polished diamond, depending on the selection).