# **Smart Recut**

Smart Recut provides more sophisticated and customizable algorithms of finding controllably asymmetric recut solutions, superior to the ordinary Recut procedure.

# On this page: 1 Running Smart Recut 1.1 Standalone Run 1.2 Recut and SmartRecut in One Run 2 Smart Recut Presets

# **Running Smart Recut**


### Standalone Run

To run Smart Recut:

- 1. Select Recut solution.
- 2. Set **Algorithm** = your available Smart Recut algorithm.
- 3. If necessary, set the algorithm options:
  - a. Allow Girdle Extra Facets see Using Girdle Extra Facets
  - b. Fix Girdle, Fix Crown, Fix Pavilion see Smart Recut with Restrictions
  - c. Select Presets see the Smart Recut Presets section below
  - d. Target Cut grade and Symmetry grade
- 4. Click Start Allocation.




Smart Recut algorithm seeks to keep the table plane of the model unchanged unless the solution found deviates from the original by a considerably wide margin. Besides that, Smart Recut is enabled with the options to fix the girdle, girdle + crown, or girdle + pavilion. See **Smart Recut with Restrictions** for more details.

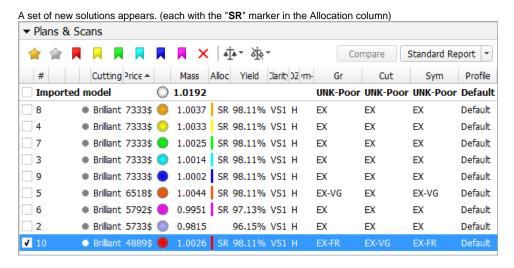

By default, Smart Recut produces 8 solutions, each according to certain *preset* (see the definition in the Smart Recut Presets section below). The solution markers in the tree are color-coded to match the corresponding presets.

### Recut and SmartRecut in One Run


The system provides the ability to apply Recut and Smart Recut algorithms sequentially **within one run**. To enable, select your Recut algorithm, then select the **+ Smart Recut** option, then start allocation.

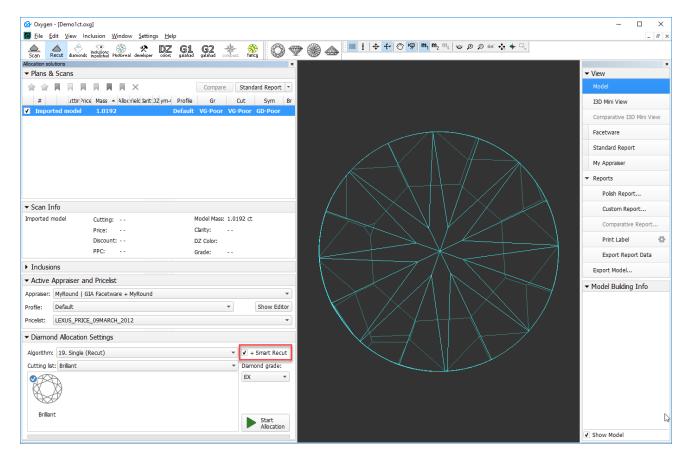

With the + Smart Recut option, the SmartRecut will start automatically after the Recut, basing on the two best Recut solutions. In the solution list, you will obtain both recut and SmartRecut solutions.



SmartRecut starts with the last selected options.

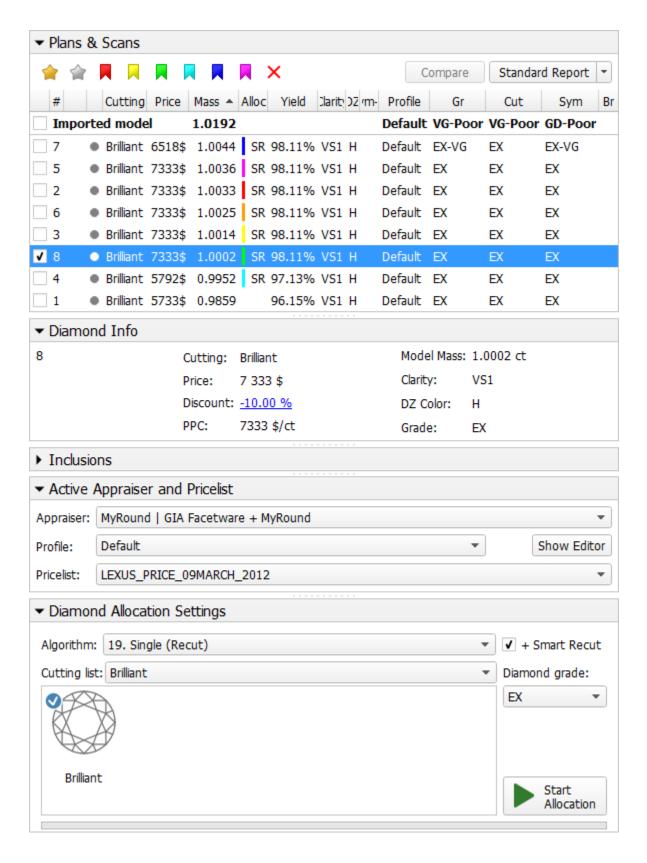

## **Smart Recut Presets**

A *preset* is a collection of additional limitations on top of the appraiser which are imposed on the solution. Each Smart Recut solution seeks a balance between retaining the most mass of the stone and achieving the highest possible symmetry. The presets, in effect, assign different weights to the geometrical requirements, thus shifting that balance to a varying extent. The presets are ordered from the strictest to the most relaxed. Below is the list of all presets:

- 1. UltraSym
- 2. HighSym
- 3. MediumSym
- 4. NormalSym
- \_\_\_5. Standard
- 6. LowSym
- 7. ExtendedLimits
- 8. MaxMass



While comparing the Smart Recut solutions, keep in mind the following features:

- The solutions, generally speaking, are **not** numbered in the same order as presets. In fact, the numbering of solutions is based on which preset finishes its job before the others.
- Smart Recut algorithm is not fully deterministic and might give slightly different results on the same input data. The difference in mass does not exceed 0.0001 ct.
- Though Smart Recut presets are designed to be uniformly distributed in a certain range on the imaginary scale "higher symmetry higher mass", the solutions are not guaranteed to behave in the same way. Occasionally a preset with stricter limitations might return a
  solution with lower symmetry.

The preset with the most relaxed limitations is called MaxMass, for it should be expected to produce the solution of maximal mass (but probably lacking in symmetry and other qualities).

Consider these two sets of Smart Recut solutions together with their photorealistic images. Each set is obtained from one stone and ordered by decreasing mass.

### First set

Preset	- (Original stone)	- (13. Single-M)	MaxMass	LowSym	ExtendedLimits	
Mass	4.3900	4.1069	4.2596	4.2540	4.2493	4.2
Optical symmetry	-	8.22	2.47	4.66	5.29	6.6
Picture						


### Second set

Preset	- (Original stone)	- (13. Single-M)	MaxMass	LowSym	ExtendedLimits	
Mass	1.1269	1.0952	1.1224	1.1221	1.1216	1.1
Optical symmetry	-	9.13	4.63	5.63	6.02	5.9
Picture						



To obtain a photorealistic view of the stone, click **Photoreal** in the main menu. The main view field will be split in two, with the photorealistic view in the lower half. Note that in this mode you may still operate the **Plans & Scans** panel. As you select other models, the photorealistic image would change accordingly.

To view and edit presets, open the Appraiser editor panel (see My Appraiser), then click the Show presets button.

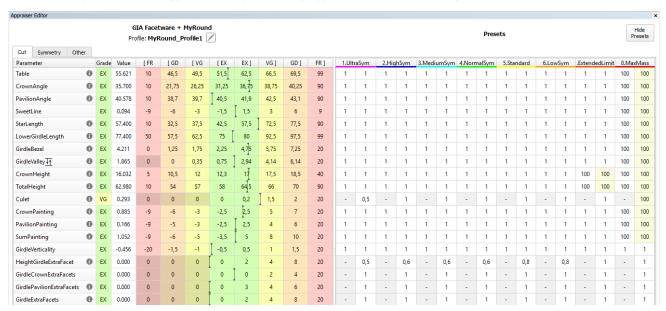

The limitations are defined with respect to those of MyAppraiser. Each parameter within each preset is described by two numbers. These are the multipliers for the left and right border, correspondingly. If both numbers are 1, this means that both borders are unchanged, that is, MyAppraiser values are used.

Sweetline is a derived parameter with special meaning; see Using SweetLine for more details.

Blue background denotes the selected field, if any. The name of the preset and the side (Min or Max) corresponding to the selected field are repeated in bold at the table header. Selection can be moved around using the arrow keys.

Hyphen on gray background denotes the positions where the corresponding limit is physically impossible to overstep, and thus need not be enforced specifically (lower limit of 0 for the culet size, for example). Such positions are not accessible for editing and can't be selected. When the selection is moved around with arrow keys, it jumps over them.

Yellow background denotes the multipliers which are loosening the MyAppraiser limitations, that is, left-border multipliers with value less than 1 and right-border multipliers with value greater than 1.


All numeric values are editable. Double-clicking in any table cell transforms it to the input field: . Pressing **Enter** does the same to the selected cell. You may change the field using the arrow keys **Up/Down** on the keyboard, or the arrow buttons next to the field, or simply by typing the values in. Pressing **Esc** finishes the editing and discards changes. Pressing **Enter** or clicking in another cell finishes the editing and keeps the newly entered value in the edited

Changed values are shown in bold. The presence of such values is further indicated by the bold note Unsaved changes at the bottom of the panel.

Life cycle of the edited parameters is controlled by the following buttons at the bottom of the panel:



① These buttons are not to be confused with the similar buttons controlling the MyAppraiser parameters (see My Appraiser).



Redo	Redo the recently undone change, if any.	
Discard	Discard the recent edits.	
Apply	Save the parameters within the program, so from that point on the new values would be applied to all models.	

The parameters are stored in \*.ini files located at  $\USERPROFILE \OCTONUS$  Software\SmartRecutPresets\. No mechanism for managing multiple versions of presets is provided. If you want to return to the default values, copy the files manually beforehand and save them elsewhere.